
## Removal

- 1 Remove wiper blade (82-620).
- 2 Slide rubber profile strip (21) with the two holding springs (22) with one end out of holder (b) of wiper blade (9) in direction of arrow (a).
- 3 Pull out both holding springs (22).
- 4 Remove rubber profile strip (21) from holder of wiper blade (9).

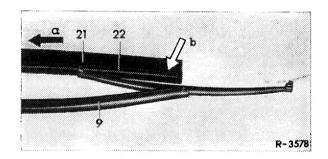

## Installation

- 5 Loosely insert rubber profile strip (21) without holding springs (22) into a holder of wiper blade (9). Leave long end free.
- 6 Slip both holding springs (22) into rubber profile strip.
- 7 Introduce free end of rubber profile strip including holding spring into other holder of wiper blade to engage (arrow b).
- 8 Install wiper blade.